

QUICK START GUIDE

GLA132 Series Ultraportable Gas Analyzer

NOTE: Refer to the User Guide for installation and operating instructions. The User Guide can be found on the USB key provided with your equipment. You can also contact your local sales representative (see contact information on the back of this page)


Powering the Analyser

The power connection is located on the analyzer left side panel.

To power the analyzer, either

- Use the AC/DC power supply to the DC power inlet, or
- Use the battery hook-up kit (optional)

Figure 1 Left Side Panel

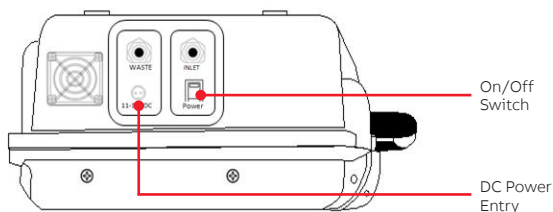

WARNING

Failure to ground the third prong of the facility electrical outlet may result in electrical damage to the analyzer and electrical shock to the operator.

Emergency Shutdown

If the analyzer malfunctions and requires to be shutdown immediately:

- 1 Turn off the analyzer using the left side panel on/off switch.
- 2 Unplug the power cord from the analyzer.
- 3 Notify trained service personnel that the analyzer needs repair or servicing.

**CLASS 1
LASER PRODUCT**

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to laser Notice no. 50, dated June 24 2007, and IEC 60825-1:2014





ABB, Inc.
Measurement & Analytics

3400, rue Pierre-Ardouin
Québec (Québec) G1P 0B2
Canada

Phone:
North America: 1 800 858 3847
Worldwide: +1 418 877 8111

Email:
ICOS.support@ca.abb.com

www.abb.com/measurement

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents, in whole or in parts, is forbidden without prior written consent from ABB.

© ABB, 2024

SOI/GLA132-EN-B

P/N 3KXG167002R4101 Rev B 08.2024